

# Bravura Lockset Quick-Install Instructions

→ 1) Use template on the bottom of the back page to drill the mounting holes.



→ 2a) Insert latch mechanism into door. If using a privacy latch, make certain the threaded button is facing the side of the door from which you wish to lock the door (inside/non-public). Drill pilot holes for the latchbolt mechanism screws.

→ 2b) Use either the square or 1/4" radius latch-face (provided), depending on the mortise in your door. Attach latch-face with provided wood screws. (Note: before the latch-face is installed, the latch bolt can be pulled-out and rotated so that its beveled side is facing the jamb stop.)



→ 3) Insert the spindle into the latch mechanism while depressing the button. The spindle is properly installed when the button pops-up on the opposite side of the latch, and the spindle is locked into place.

(over)



## INSTRUCTIONS FOR INSTALLATION ON NEW WOOD DOORS

① Cut out the template and fold it along the dotted line. Place the folded template against the edge of the door so that the mark (#2) is approximately 38" above the floor. Mark the center of the door edge using the correct location for your door thickness. (NOTE: deadbolt should be 5.5" above door lock.)


② Still holding the template in place, mark the center of the door face hold (#3). This mark must measure exactly 2-3/8" or 2-3/4" from the edge of the door. (NOTE: many exterior doors are 2-3/4" backset, match other doors on project.)

③ Drill a 2-1/8" diameter hole through the door face centered on the mark. Drill halfway through the door from each side to prevent splitting.

④ Drill a 1" diameter hole in the center of the door edge as marked.

⑤ Install lock set by following the Bravura Quick-Install Instructions.

✂ cut along solid lines

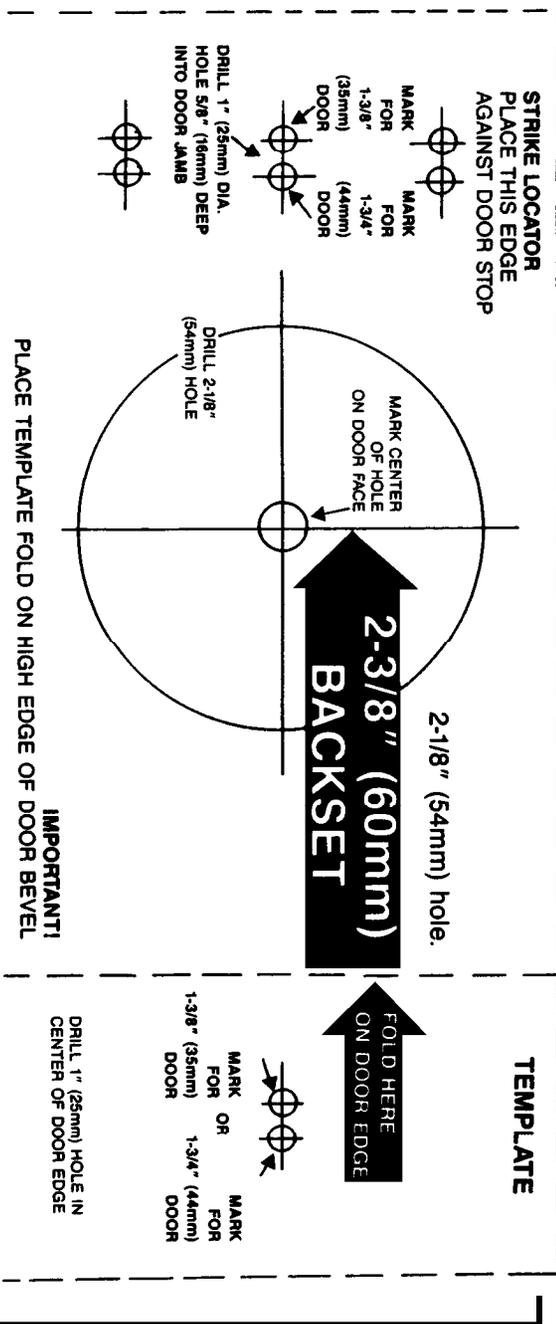

→4) Insert the lock-half that has two, beveled holes into the inside/non-public side of the door. Make certain the two latch-supports bracket the latch for support.



→5) Insert the remaining lock-half into the public (outside) side of the door. Note that the two threaded mounts on this lock-half insert into the larger tubes on the other lock-half.



→6) Mounting screws are included for 1 3/8" thick and 1 3/4" thick doors. For 1 3/8" doors insert the two, shorter screws into the beveled holes of the non-public lock-half. During final tightening of these screws, support levers to hold them level. **DO NOT USE ELECTRIC DRILL!!** NOTE: to protect the finish on knobs during screw-installation, it is recommended that you keep them covered with their plastic shipping bag.



→7) Install privacy button on privacy locks. NOTE: there are two privacy buttons included, the shorter button is for 1 3/8" thick doors.

→8) Mortise door jamb for strike-plate (provided), install black dust box, and mount using the included wood screws.

**Bravura**