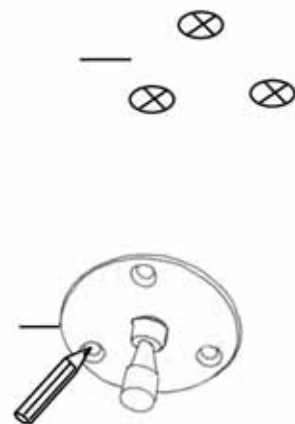
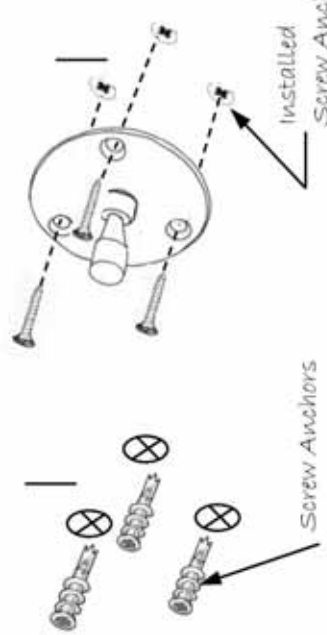
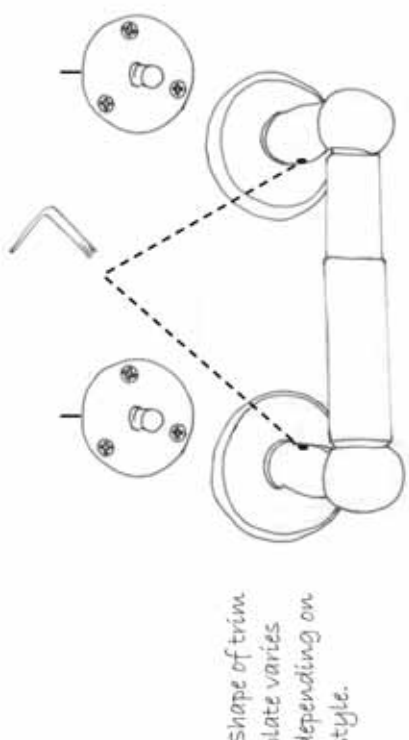


Toilet Paper Holder with Spring Rod - Installation Instructions

1 Make two marks on wall to locate center of mounting plates. Center to center spacing for mounting plates is 6 inches. 	2 Mark three hole locations for mounting plate. 
3 Use a screw driver to install three Screw Anchors into the wall for each mounting plate. Install mounting plates on top of the Screw Anchors. Attach with the sheet metal screws provided. 	4 Slip trim plates and posts over the mounting plate stud. Tighten set screw at the base of each post with the allen wrench provided.  Shape of trim plate varies depending on style.

EMTEK
ASSA ABLOY

304 STAINLESS STEEL 4811-1110000